


# JRC 4 IN 1

Our in one  
universal remote control  
instruction manual

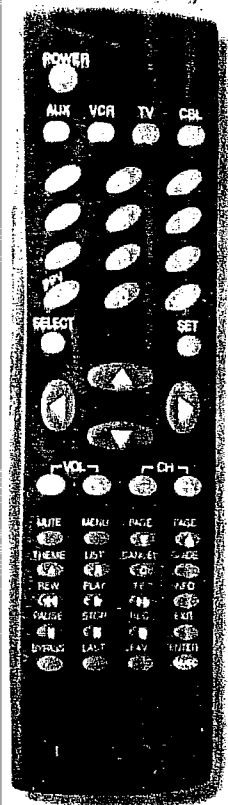

## BUTTON DESCRIPTION

### POWER

The POWER button turns off/on selected component.

### AUX. VCR. TV. CBL

The AUX. VCR. TV. CBL buttons are used to select the device component you want to control.

### 0-9

The number keypad operate the same as the original remote, and are used to select channels and enter device codes.

### LOCK/PPV

Feature vary by cable provider, some provide access to PAY PER VIEW.

### HELP

Display the help screen

### SELECT

Use SELECT to choose options within menu options

### SET

Use SET with a selected device to program the remote.

### ▲▼▶◀

Use cursor keys to move the cursor in the program guide and menu screen.

### VOL +/-

Use the VOL +/- buttons to raise/lower the sound volume.

### CH +/-

Use the CH +/- buttons to select the next higher/lower channel.

### MUTE

Use MUTE to turn off or on sound.

### MENU

Use MENU buttons displays cable settings or menu

### PAGE, PAGE

Use PAGE (or) PAGE through menu screens and the program guide.

### GUIDE

The GUIDE key displays the program guide

### INFO

Use INFO to display current channel and program

### EXIT

Use INFO to exit out of cable converter menu and guide.

### A, B, C

Functions set by cable operator.

### ◀◀▶▶||■●

The REW. PLAY. FF. PAUSE. STOP. RECORD buttons operate the same as the original VCR.

### BYPASS

Controls the BYPASS option.

### LAST

Use LAST to recall the last channel viewed and to page one screen in menu.

### ENTER/MUSIC

Use ENTER/MUSIC to display menu of digital music channels or to enter channels on some TV models.

## PROGRAMMING REMOTE

### TV

1. Manually turn on the TV.  
Find the three-digit code for your TV found on the device code list.

2. Press and hold both SET and TV keys until LED light turns on.

3. Enter the code using the keypad.  
After the correct code is entered, the TV should turn off.

NOTE: If the TV does not respond, try other codes for your brand. If none of the codes work for your brand, try the Code Search method.

4. Press the TV key.

5. Enter your key code here for easy reference.

### VCR

1. Manually turn on the VCR.  
Find the three-digit code for your VCR found on the device code list.

2. Press and hold both SET and VCR keys until LED light turns on.

3. Enter the code using the keypad.  
After the correct code is entered, the VCR should turn off.

NOTE: If the VCR does not respond, try other codes for your brand. If none of the codes work for your brand, try the Code Search method.

4. Press the VCR key.

5. Enter your key code here for easy reference.

## PROGRAMMING REMOTE

### CBL (CATV)/DBS

1. Manually turn on the Cable Box.  
Find the three-digit code for your CBL found on the device code list.

2. Press and hold both SET and CBL keys until LED light turns on.

3. Enter the code using the keypad.  
After the correct code is entered, the CBL should turn off.

NOTE: If the CBL does not respond, try other codes for your brand. If none of the codes work for your brand, try the Code Search method.

4. Press the CBL key.

5. Enter your key code here for easy reference.

### AUX

1. Manually turn on the Auxillary device.  
Find the three-digit code for your AUX found on the device code list.

2. Press and hold both SET and AUX keys until LED light turns on.

3. Enter the code using the keypad.  
After the correct code is entered, the AUX should turn off.

NOTE: If the AUX does not respond, try other codes for your brand. If none of the codes work for your brand, try the Code Search method.

4. Press the AUX key.

5. Enter your key code here for easy reference.

## PROGRAMMING REMOTE

### AUX (setting 2nd TV/VCR/CBL)

1. Manually turn on the desired TV/VCR/Cable box device.

Find the three-digit code for the desired device found on the device code list.

2. Press and hold both SET and TV/VCR/CBL keys until LED light turns on.

3. Enter the code using the keypad.  
After the correct code is entered, the TV/VCR/CBL should turn off.

NOTE: If the TV/VCR/CBL does not respond, try other codes for your brand. If none of the codes work for your brand, try the Code Search method.

4. Press the AUX key.

5. Enter your key code here for easy reference.

### Using CODE SEARCH

1. Manually turn on the desired device you wish to program.

2. Press and hold both SET and TV/VCR/CBL keys until LED light turns on.

3. Press ▲/▼ (increment/decrement) key to switch code. When the correct code has been selected, the TV/VCR/CBL should turn off.

4. Press the TV/VCR/CBL/AUX key.

# DEVICE CODE LIST

## CODE LIST

000 006 003 070  
 047 057  
 011 026  
 062 036  
 104 107 109 005 011 030  
 112 011 047 068  
 003  
 047 064 065 068  
 112  
 090  
 026 029 047 064 065 068 090 099  
 090  
 068  
 090 095  
 026  
 090 104  
 026 090  
 026 047 068 099  
 090  
 107 120 003 004 010 013 015 016 017  
 019 025 026 029 068 090 092 094 097  
 026 068  
 090  
 090  
 003 026 054  
 003 009 026 028 030 031 050 061 068  
 069 090 093 095  
 071 117  
 061 090  
 090  
 109 002 021 031 033 047 062 066 068  
 070 079 079 082  
 007 011 012 014 019 026 068 070 073  
 079 082  
 068  
 000 026 032 034 055 058 068 071 077  
 081 083  
 035  
 020  
 035  
 047  
 026 033 054 068 073 076 079 098 099  
 085  
 119 023 082 084  
 047 119  
 064 113  
 026 030 047 090  
 000  
 000  
 068  
 100 006 033 035 071 089  
 089 027  
 110 113 114 019 033 035 047 051  
 052 065 068  
 035 047  
 000 068 071  
 063  
 047 054 068 088  
 063  
 049 054 057 061 068 086 088  
 016 047 068 099  
 101 109 021 024 047 054 071 086  
 090  
 090  
 090  
 101 006  
 109 005 035 082 121 122 126 127 128  
 129 130  
 109 113 114 019 026 035 047 051 052  
 054 065 068  
 108 113 019 035 047 065 068 069 084  
 027 043 047 058 067 068 096  
 026 068  
 033 036 066 070  
 112 026 038 040 048 068

QUASAR  
 RADIO SHACK  
 RCA  
 REALISTIC  
 RUNCO  
 SAMPO  
 SAMSUNG  
 SANYO  
 SCOTT  
 SEARS  
 SELECO  
 SHARP  
 SIGNATURE  
 SONY  
 SOUNDESIGN  
 SPECTRICON  
 SSS  
 SUPREMACY  
 SYLVANIA  
 SYMPHONICS  
 TANDY  
 TATUNG  
 TECHNICS  
 TEKNIKA  
 TECHWOOD  
 TELERENT  
 TERA  
 TMK  
 TOSHIBA  
 TOTEVISION  
 UNIVERSAL  
 VIDEO CONCEPTS  
 VIDIKROM  
 VIDTECH  
 WARDS  
 WESTING HOUSE  
 YAMAHA  
 YUPITERU  
 ZENITH  
 ZONDA

## VCR

## BRAND

AIWA  
 AKAI  
 AMPRO  
 ANAM  
 AUDIO DYNAMICS  
 BRCKSONIC  
 CANON  
 CAPEHART  
 CRAIG  
 CRUTIS MATHES  
 DAEWOO  
 DAX  
 DAYTRON  
 DENON  
 DYNATECH  
 ELECTROHOME  
 EMERSON  
 FISHER  
 FUNAI  
 GE  
 GO VIDEO  
 GOLDSTAR  
 HARMAN KARDON  
 HITACHI  
 INSTANT REPLAY  
 JCL  
 JCPENNY  
 JENSON  
 JVC

## CODE LIST

067 067  
 022 025 042 056  
 020  
 033 086  
 014 022 057  
 043 088 091  
 081 086  
 036  
 106 048 092  
 066 093  
 107 003 006 013 034 036 038 041  
 014 057 022  
 036  
 072 015  
 087 096  
 026  
 004 025 032 034 043 044 051 060 066  
 077 083 086 087 088 090 091  
 106 007 012 013  
 087  
 002 011 020 035 037 055 053 086  
 045 049 062 092  
 000 014 032  
 014 021  
 000 002 022 023 050 071 087  
 086  
 086  
 000 014 032 086 092  
 022  
 100 005 014 022 023 028 059 080 086  
 089 095

KENWOOD  
 LG  
 LLOYD  
 LXI  
 MAGIN  
 MAGNAVOX  
 MARANTZ  
 MARTA  
 MATSUI  
 MEI  
 MEMOREX  
 MGA  
 MINOLTA  
 MITSUBISHI  
 MTC  
 MULTITECH  
 NEC  
 NORDMENDE  
 OPTIONICA  
 PANASONIC  
 PENTAX  
 PHILCO  
 PHILIPS  
 PILOT  
 PIONEER  
 PORTLAND  
 PROSCAN  
 PULSAR  
 QUARTZ  
 QUASAR  
 RICO  
 RUNCO  
 RADIO SHACK  
 RCA

## REALISTIC

SALORA  
 SAMSUNG  
 SANSUI  
 SANYO  
 SCOTT  
 SEARS  
 SHARP  
 SHINTOM  
 SONY  
 SOUNDESIGN  
 STS  
 SYLVANIA  
 SYMPHONIC  
 TANDY  
 TATUNG  
 TEAC  
 TECHNICS  
 TEKNIKA  
 THOMAS  
 TMK  
 TOSHIBA  
 TOTEVISION  
 UNITECH  
 VIDEO CONCEPTS  
 VIDEO SONIC  
 VECTRO RESEARCH  
 VICTOR  
 WARDS  
 YAMAHA  
 ZENITH

## CABLE

## BRAND

GENERAL INSTRUMENTS/  
 JERROLD(CABLE)  
 HAMLIN  
 MOTOROLA / G(DBS)

## CABLE/DBS

048 049 050 051 052 054 055 056  
 008 008 012 015 024  
 002 003 002  
 040 041 042 043 044 045 046 047

NSC  
 OAK  
 PANASONIC  
 PIONEER  
 PRIMESTAR  
 PRIMESTAR(DBS)  
 REGENCY  
 SCIENTIFIC ATLANTA  
 TOCOM  
 ZENITH

## AUDIO

## BRAND

ADC  
 ADCOM  
 AIWA  
 AKAI  
 AMC  
 ANGSTROM  
 ARCAM  
 AUDIO ACCESS  
 AUDIO ALCHEMY  
 AUDIO FILE  
 AUDIO MATRIX  
 AUDIO TECHNICA  
 B & K  
 BOSE  
 BRYSTON  
 CARVER  
 CASIO  
 CHIRO  
 CINEMA SOUND  
 CITATION  
 CLARION  
 CURTIS MATHES  
 DEMON  
 ENLIGHTENED AUDIO  
 FOSGATE  
 FISHER  
 GOLDSTAR  
 HARMAN KARDON  
 HITACHI  
 INKEL  
 JCPENNY  
 JENSEN  
 JVC  
 KENWOOD  
 KOSS  
 KRELL  
 KYOCERA  
 LEXICON  
 LINN  
 LUXMAN  
 LXI  
 MAGNAVOX  
 MARANTZ  
 MCINTOSH  
 MCS  
 MERIDIAN  
 MITSUBISHI  
 MONDIAL  
 NAD  
 NAKAMICHI  
 NEC  
 ONKYO

## CODE LIST

100  
 038 057 084 034  
 015 073 082 021 180 023 054 056  
 185 141  
 079 091 094  
 147  
 146  
 111 153  
 139  
 101  
 046  
 102  
 007 008  
 172 105 054  
 109  
 009 137 074 121 059 125 014 126 081  
 012 018 101  
 103  
 145  
 013 102  
 155  
 028  
 103  
 013 112 000 168 018 029 089 099  
 114 115  
 130 031  
 018  
 040 038  
 124 163 169 119 026 031 035  
 149  
 092  
 159 103  
 122  
 167 036 065 068  
 092 028 120 059 004 027 049  
 164  
 156  
 100  
 177 050 056 058  
 075  
 080 129 142 140 143 045  
 103  
 032 024 107 118  
 059 125 178 134 081 093  
 060  
 103  
 127 151 182  
 083  
 166 178 025 039 043  
 178  
 052 071 070 085 086  
 053  
 013 158 132 020 073 174 055 175 016  
 022  
 184 028 152 141  
 113 072 116 181 001 098  
 134 089 090 093  
 013 183 104 076 171 048 096 033 051  
 110  
 019 065 154 030  
 138 131 161 106  
 042 062 067  
 041  
 135 134 047 148  
 018

SCOTT  
 SEARS  
 SHARP  
 SHERWOOD  
 SOUNDESIGN  
 SSI  
 SONY  
 TAEKWANG  
 TEAC  
 TECHNICS  
 THIETA DIGITAL  
 TOSHIBA  
 YAMAHA  
 ZENITH

## LASERDISC

## BRAND

CALIFORNAL AUDIO  
 DAEWOO  
 DENON  
 DMS  
 FISHER  
 GOLDSTAR  
 KENWOOD  
 MAGNAVOX  
 MITSUBISHI  
 NAO  
 OPTIMUS  
 PANASONIC  
 PHILIPS  
 PIONEER  
 QUASAR  
 RCA  
 REALISTIC  
 SAMSUNG  
 SHARP  
 SONY  
 TECHNICS  
 TOSHIBA  
 YAMAHA

## CODE LIST

201  
 191  
 197 206 207  
 288  
 201  
 184  
 192  
 193 204  
 204  
 204  
 199  
 188 201 203  
 193  
 186 187 204  
 201  
 198  
 199  
 190 196  
 192 195  
 189  
 188 201 203  
 192  
 200 202 205

TRI-VISION ELECTRONICS INC  
 41 Pullman Cour  
 Scarborough, Ontario  
 MI - 1E

MADE IN KOREA